Toddler Safari Site Layout Information

- The Toddler Safari is a 24' x 18' x 11' tall inflatable. Please provide at least a 30' x 23' space with at least 16' of clearance from tree branches and other obstructions for the Bouncer. This will create an open space around the Toddler Safari for safety and to protect our equipment. We will not set up the Toddler Safari under or near any electrical or telephone wires.
- ➤ Make sure there are no underground irrigation pipes and/or buried telephone cables or electric lines close to the perimeter of the bounce site. We will use 18" stakes to secure the Toddler Safari. Sandbags are available as a substitute upon request.
- ➤ Clear the site of all sharp sticks, animal waste, large rocks and other large debris. If animal waste must be removed, please cover the spot to protect our equipment from residue. On hard surfaces like driveways or parking lots, please sweep the area clean.
- ➤ The Toddler Safari surface should be relatively level. No more than a 6" slope per 10'.
- ➤ A standard 110 outlet within 50 feet is required for operation. It is best that the outlet not be shared with other large equipment.
- ➤ The Toddler Safari requires a constant source of power. Please plan to run extension cord away from foot or any other type of traffic.
- ➤ Please be present at the time of delivery, your limited assistance may be needed to help set up. Make sure a clear path of at least 3 feet wide is available for delivery of the Toddler Safari. If curbs, steps or stairs need to be negotiated, we may require the renter's assistance for delivery.